

2


1

B

B


A

A

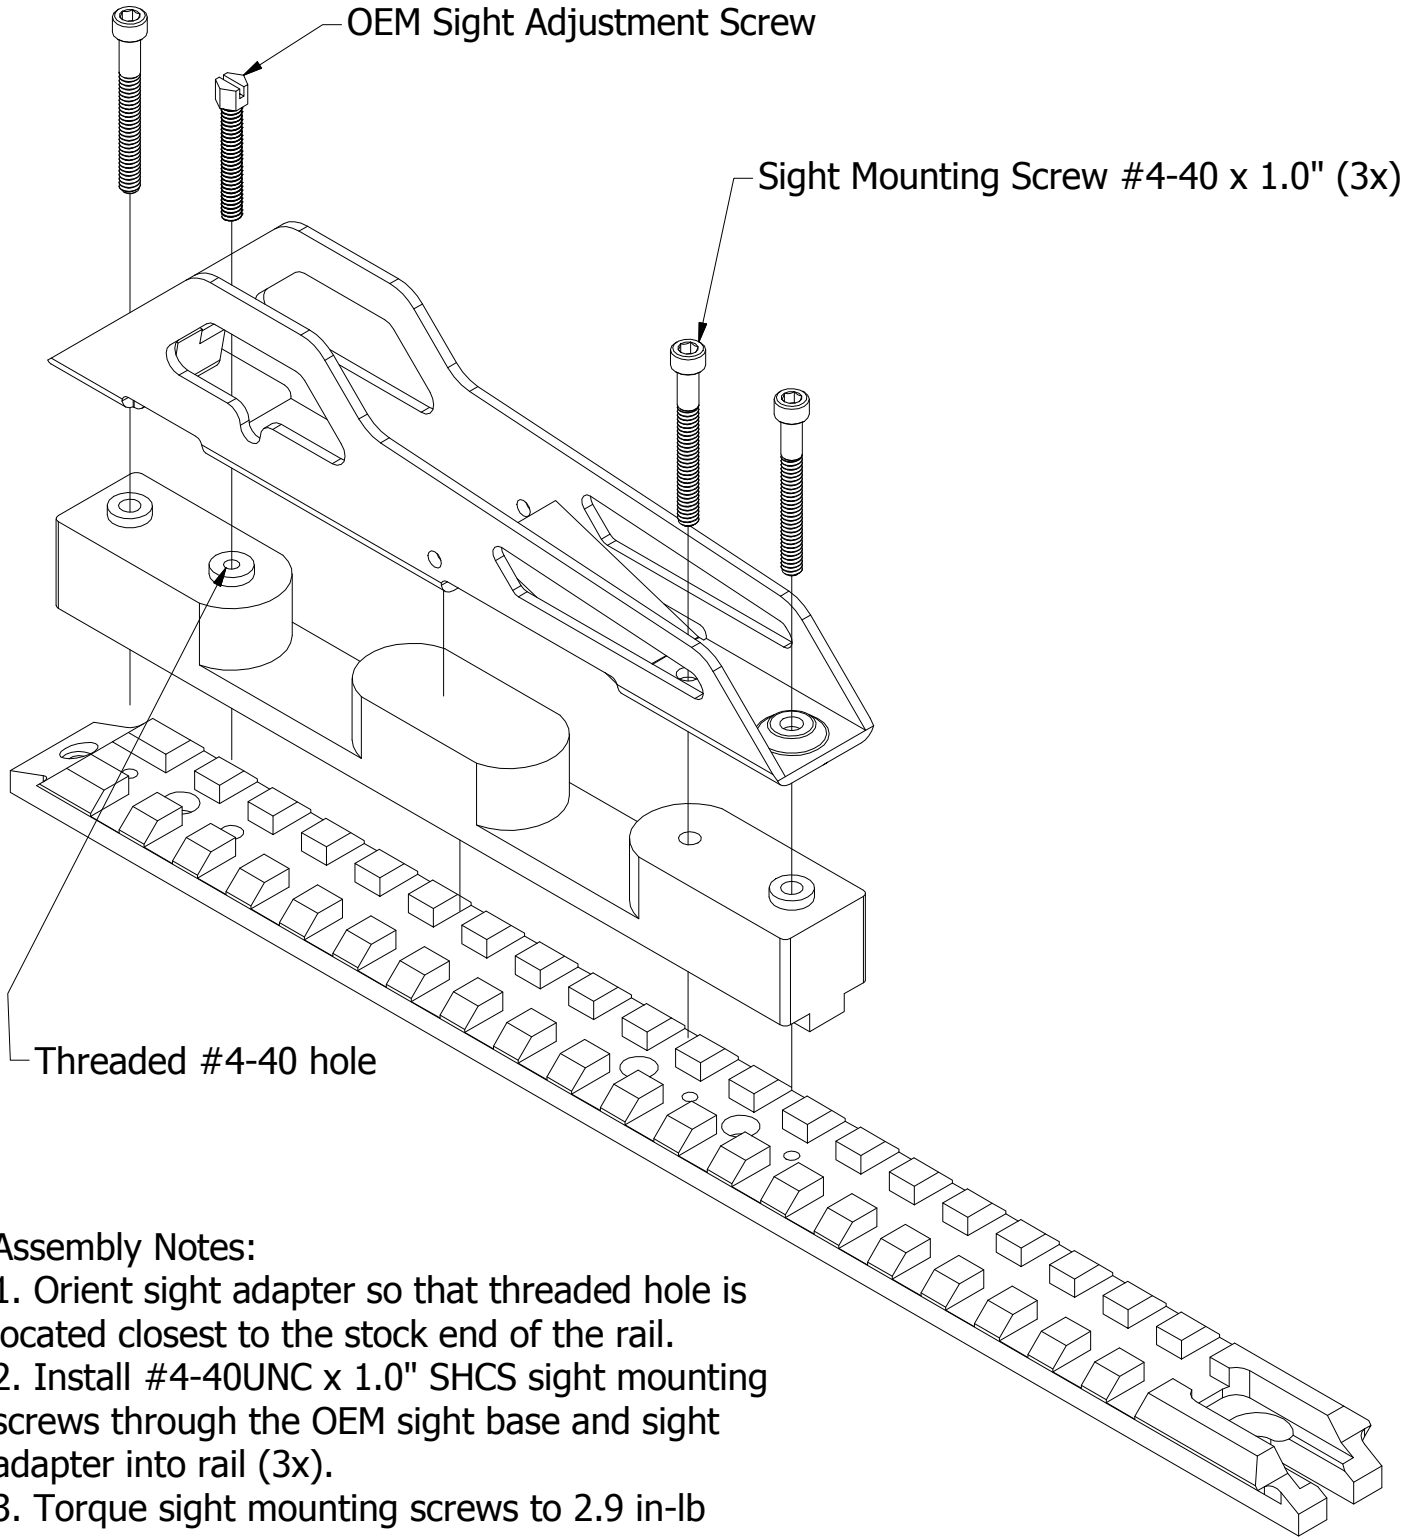

**Assembly Notes:**

1. Orient sight adapter so that threaded hole is located closest to the stock end of the rail.
2. Install #4-40UNC x 1.0" SHCS sight mounting screws through the OEM sight base and sight adapter into rail (3x).
3. Torque sight mounting screws to 2.9 in-lb maximum. Use blue thread locker if desired.
4. Install OEM sight adjustment screw and adjust height to nominal position.

Designed by K. Peck	Checked by	Approved by	Date	Date 12/16/2018	
 This design and derivatives are property of Pecks Anywhere. No unauthorized use of this material is permitted. All rights reserved.			<b>SA-xx95TS-OEMT Assembly</b>		
			<b>SA-xx95TS-OEMT-ASSY</b>	Edition <b>0</b>	Sheet <b>1 / 1</b>

2

1